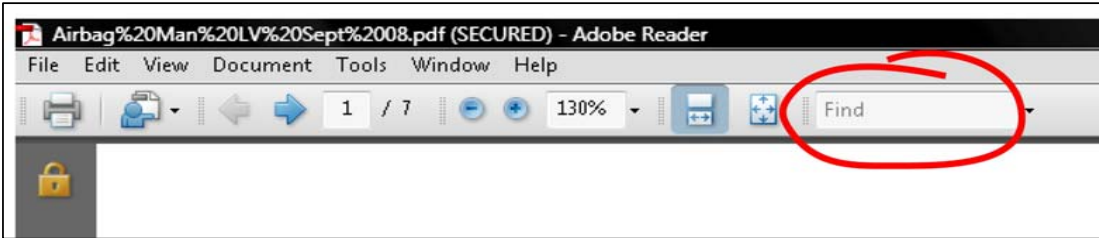




AIR SPRINGS & AIR SUSPENSION SPECIALISTS



SEARCH for your vehicle using the FIND box above, as highlighted below, simply type in the model then press enter until you see your vehicle.








AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
BMW SUVs					
X-5 (E70)	07-10			CR 5095	
Chevrolet/GMC Cars					
Impala Coil Rear	65-96			CR 5091	
Chevrolet/GMC SUVs					
Suburban / Yukon/Denali XL -2500 (4x2, 4x4)	00-09			RR 4551	
Suburban / Yukon 1500 (4x2, 4x4)	00-09			CR 5016	
Suburban 1500, 2500 (4x2, 4x4)	92-99			RR 4550	
Chevrolet/GMC Utes					
C & R 10 & 20, 1500, 2500 (4x2 Only)	73-87	CR 5015		RR 4541	*
C & K 1500 S'rado, Sierra(4x2, 4x4)(not HD)	99-07			RR 4588	+++
C-1500 HD, Silverado, Sierra (4x2, 4x4)	05-06			RR 4544	
C-1500 HD, Silverado, Sierra (4x2, 4x4)	01-03			RR 4544	
For lowered vehicles please call us and have the vehicle available to provide us with measurements					
C & K 1500 (4x2 only) comfort kit	88-98			RR 4542	
C-1500, C-2500 (4x2, 4x4)	88-98			RR 4543	
C-2500, Silverado, Sierra(4x2, 4x4)(not HD)	99-05			RR 4544	
C-2500 HD, Silverado, Sierra (4x2, 4x4)	01-10			RR 4547	
C & K -2500 (4x2, 4x4) (Rear Drum Brakes)	88-00			RR 4543	
C-3500 Silverado, Sierra (4x2, 4x4)	01-10			RR 4547	
C-3500 (4x2 Only) Lowered 3"/5" no axle flip	92-00			RR 4578	
C & K 3500 (4x2, 4x4)	88-00			RR 4543	
C-30 (4x2 only)	67-87	CR 5015		RR 4541	*
Dodge Cars/SUV's					
Nitro	07-10			CR 5092	

See AIR CONTROLS listings to add On-Board convenience.

Vehicle is not listed? please contact us.

Ph: 1800 air bag (1800 247 224)






info@airbagman.com.au

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Dodge Commercials					
Dakota (4x4 only) (not crew cab)	97-03			RR 4542	 +++
Ram 1500 Mega Cab (4x2, 4x4)	06-08			RR 4552	
Ram 1500 (4x2, 4x4)	02-08			RR 4549	
Ram 2500, Ram 3500 (4x2, 4x4)	03-10			RR 4552	
For lowered vehicles please call us and have the vehicle available to provide us with measurements					
D & W 200, 250, Ram 2500 (4x2, 4x4)	69-02			RR 4541	*
D & W 300, 350, Ram 3500 (4x2, 4x4)	69-02			RR 4541	*
Fiat Vans					
Ducato - All Styles	88-93			RR 4553	
Ducato - Cab Chassis X244	94-05			RR 4554	
Ducato - Van X244	94-05			RR 4586	
Ducato - Van, C/Chassis X250	06-10			RR 4605	
Ford Australia Cars/SUVs					
Falcon Wagon	68-10			RR 4564	
Territory	04-10			CR 5013	
Territory Lowered 2"	02-10			CR 5008	
Falcon Sedan, Fairmont, Fairlane BA-FG (incl. XR)	02-10			CR 5008	
Falcon Sedan, Fairmont, Fairlane BA-FG (incl. XR) Lowered	02-10			CR 5068	
Fiesta WS	09-10			CR 5094	
Focus LS, LT, LV	05-10			CR 5094	
Maverick - see Nissan Patrol GQ	88-97			-	
Explorer	96-99			RR 4568	
Escape BA, ZA, ZB, ZC	00-10			CR 5014	

See AIR CONTROLS listings to add On-Board convenience.

Vehicle is not listed? please contact us.
Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Ford Australia Commercials					
Courier PC-PH (4x2 excl. 4.0L V6)	89-06			RR 4598	
Courier PC-PH (4x4 c/w Diesel or 4cyl Petrol)	89-06			RR 4567	
Courier (4x2 & 4x4 with 4.0L V6) PH	04-06			RR 4585	
Ranger 4x2 with 2.5L TD	06-10			RR 4607	
Ranger 4x2 HighRider & 4x4 with 3.0L TD	06-10			RR 4596	
Falcon Ute (excl. FPV, RTV & FG XR6/8)	68-10			RR 4564	
Falcon Ute lowered inc FG XR & FPV measure Leaf to Chassis height at 3" behind axle & call Airbag Man (see notes)					
Raider (4x4) UV	91-96			RR 4567	
Transit VH Round Axle Single Wheels	00-06			RR 4561	
Transit Front Wheel Drive, Type 260-300	04-10			RR 4608	
Transit Front Wheel Drive, Type 330-350	04-10			RR 4609	
Transit Rear W/Drive, Round Rear Axle, Single Wheels	04-10			RR 4601	
Transit Rear Wheel Drive, Round Axle Dual Wheels	00-10			RR 4562	
Transit Rear Wheel Drive, Round Axle	89-99			RR 4573	
F-100, Bronco (4x2, 4x4)	68-90	CR 5020		RR 4541	*
F-150 (4x2, 4x4)	68-90	CR 5019		RR 4541	*
F-250 (4x2 only)	00-07	CR 5019		RR 4580	
F-250 (4x4 only) under chassis rear kit	00-06	RR 4557		RR 4566	
F-250 (4x4 only) outboard mounted rear kit	00-06	RR 4557		RR 4530	
F-350 (4x2 only) straight rail, c/chassis	00-07	CR 5019		RR 4556	
F-350 (4x4 only) straight rail, c/chassis	00-06	RR 4557		RR 4556	
F-350 (4x2 only) stepped rail, no sway bar	00-07	CR 5019		RR 4580	
F-350 (4x4 only) stepped rail, no sway bar	00-06	RR 4557		RR 4566	

FPV and FG XR require brake line changes
BA on require exhaust changes for lowered applications

See AIR CONTROLS listings to add On-Board convenience.














Vehicle is not listed? please contact us.
Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Ford USA Commercials (Factory bed unless stated)					
F-100 (4x2, 4x4)	68-79	CR 5020		RR 4541	*
F-150 (4x2, 4x4)	04-08			RR 4587	
F-150 (4x2, 4x4)	97-04			RR 4555	
F-150 (4x2, 4x4)	68-96	CR 5019		RR 4541	*
F-250 HD (4x2 only)	84-04	CR 5019		RR 4541	*
F-250 HD, F-350 (4x2 only)	05-07			RR 4589	
F-250, F-350 (4x4 only)	08-10	CR 5047		RR 4541	*
F-350 (4x2 only)	70-04	CR 5019		RR 4556	*
F-350 (4x4 only)	84-04	RR 4557		RR 4556	*
F-350 (4x2, 4x4)	05-08	CR 5047		RR 4556	*
F-350 (4x4 only)	73-83			RR 4541	*
F-450 (4x2, 4x4)	05-08	CR 5047		RR 4556	*
F-450 (4x2, 4x4)	99-04			RR 4556	*
Great Wall Motors					
V240 4x2, 4x4	09-10			RR 4599	
SA220 4x2	09-10			RR 4599	
Holden Cars/SUVs					
Adventra	03-07			CR 5001	
C'dore, Monaro VR to VZ (IRS) - Full Air Conversion	93-07			OA 6000	
Commodore VR to VZ (IRS) 390-420mm #	93-07			CR 5001	
Commodore VR to VZ (IRS) 350-380mm #	93-07			CR 5029	
Commodore VR to VZ (IRS) 320-350mm #	93-07			CR 5093	
Commodore VB to VS (live axle) (std. height)	78-98			CR 5015	
Commodore VB to VS (live axle) lowered	78-98			CR 5086	
Caprice / Statesman (IRS) - Full Air Conversion	90-06			OA 6000	
Caprice / Statesman (IRS) 390-420mm #	90-06			CR 5001	
Caprice / Statesman (IRS) 350-380mm #	90-06			CR 5029	
Caprice / Statesman (IRS) 320-350mm #	90-06			CR 5093	
Suburban	98-00			RR 4550	

See AIR CONTROLS listings to add On-Board convenience.

Vehicle is not listed? please contact us.
Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

COMMODORE REAR HEIGHT MEASUREMENTS:
To check which Coil-Rite kit will suit an IRS (not VE) Commodore, measure from the hub centre to bottom of the wheel arch, then choose the matching kit.
Jack car up before measuring if it is lower than desired.


















See AIR CONTROLS listings to add On-Board convenience.

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Holden Cars/SUVs					
Jackaroo UBS	91-05			CR 5022	
Jackaroo	82-91			RR 4598	
HQ-HZ Sedan & Wagon, Monaro, WB	71-84			CR 5087	
Frontera MX	96-03			CR 5011	
Torana Lowered - LH, LX, UC	74-80			CR 5010	
Holden Commercials					
Colorado (4x2 V6, 4x4)	08-10			RR 4527	 +
Colorado(4x2 NOT V6)	08-10			RR 4599	 +
Rodeo RA on (4x2 V6, 4x4)	03-08			RR 4527	 +
Rodeo RA on (4x2 NOT V6)	03-08			RR 4599	 +
Rodeo (4x2, 4x4)	81-02			RR 4599	 +
Commodore VU to VZ (IRS) - Full Air Conversion	01-07			OA 6000	
Commodore VU to VZ (IRS) 390-420mm #	01-07			CR 5001	
Commodore VU to VZ (IRS) 350-380mm #	01-07			CR 5029	
Commodore VU to VZ (IRS) 320-350mm #	01-07			CR 5093	
Commodore VG to VS (live axle) (std. height)	90-00			CR 5015	
Commodore VG to VS (live axle) lowered	90-00			CR 5086	
Ute 1-Tonner (4x2)(leaf rear)	03-05			RR 4529	
1 Tonner / Ute Panel Van FX-WB (4x2)	71-85			RR 4598	
Crewman, Cross8, Cross6 (4x2, 4x4)	03-07			RR 4529	
Honda Vans					
Odyssey RA6 & RA9	99-04			CR 5023	
Odyssey RA1 & RA3	96-98			CR 5024	
HSV Car/SUVs					
Use Holden Equivalents					
HSV Commercials					
Avalanche XUV (4x4)	04-07			RR 4529	
Maloo, Maloo R8 - Full Air Conversion	01-07			OA 6000	

Vehicle is not listed? please contact us.
Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits







Ride-Rite kit can be used with most popular lift kits

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Hummer					
H3	06-10			RR 4621	
H2, H2 SUV (With rear coil springs)	03-10			CR 5016	
Hyundai Cars/SUVs					
Santa-Fe SM	00-07			CR 5010	
Santa-Fe CM	07-10			CR 5062	
Terracan HP	01-09			CR 5000	
i-MAX	08-10			CR 5057	
Hyundai Commercials					
i-Load	07-10			LU 8010	
Isuzu Light Commercials					
D-Max LS 4x2, all 4x4's	09-10			RR 4527	 +
D-Max SX 4x2 only	09-10			RR 4599	 +
Iveco Light Commercials					
Daily 35C - 50C All Models	07-10			RR 4604	
Daily 29-35 S-L, 11-18, Leaf Above Axle	00-10			RR 4620	
Daily 35 S-L, 9 to 17, Leaf Below Axle	00-06			RR 4592	
Daily 35C, 40C 50C (11-13) (With ABS only)	00-06			RR 4563	4 air bags
Jeep SUVs					
Commander XK (4x2, 4x4)	06-09			CR 5044	
Commander XK (4x2, 4x4) 2" lift	06-09			CR 5034	
Grand Cherokee WH/WK	05-09			CR 5044	
Grand Cherokee WH/WK 2" lift	05-09			CR 5034	
Grand Cherokee WJ (excl. factory raised models)	98-05			CR 5071	
Grand Cherokee WJ 1-2" lift	98-05			CR 5075	
Grand Cherokee (excl. factory raised models) ZG	92-98			CR 5025	
Cherokee KK	09-10			CR 5092	
Cherokee KJ	02-08			CR 5009	
Wrangler JK incl. Unlimited	07-10			CR 5063	
Wrangler Rubicon JK incl. Unlimited	07-10			CR 5064	
Wrangler TJ	97-07			CR 5044	

See AIR CONTROLS listings to add On-Board convenience.

Vehicle is not listed? please contact us.
Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

Ride-Rite kit can be used with most popular lift kits

See AIR CONTROLS listings to add On-Board convenience.

Note: Raised Jeeps may require different bellows rather than spacers

Tyre to Chassis Clearance Requirements: * = 190mm (7.5") +++ = 150mm (6") *** = 245mm (9.5")
Notes: + = Torsion Bars may require adjustment

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE



= No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
<i>Kia Van's / SUVs / Light Commercials</i>					
Carnival & Grand Carnival VQ	06-10			CR 5023	
Sorento BL (130mm ID Rear Coil)	04-06/07			CR 5056	
Sorento (115mm ID Rear Coil)	07/07-10			CR 5032	
Pregio	04-07			RR 4579	
K2700	03-09			RR 4583	Req. Fab.
<i>Landrover SUVs</i>					
Discovery Series 1 & 2 (with rear coils)	90-04			CR 5026	
Disco. Series 1 & 2 (with rear coils) +2" Raise	90-04			CR 5027	
Range Rover (with rear coils)	70-96			CR 5026	
Range Rover (with rear coils) +2" Raise	70-96			CR 5027	
Defender 90	84-10			CR 5026	
Defender 110	83-10			CR 5028	Light Duty
Defender 110	83-10			OA 4515	H Duty
We also sell replacement parts and over-ride kits for some Landrovers with factory air suspension.					
<i>Landrover Commercials</i>					
Defender 110, 130 (requires inner coil removal)	90-10			CR 5028	Light Duty
Defender 110, 130	90-10			OA 4515	H Duty
<i>Lexus SUVs</i>					
LX450, LX 470 non AHC	98-03			OA 6005	H Duty
LX450 & 470 fitted with AHC, add cab control kit, call Airbag Man					
<i>Mazda Cars/SUVs</i>					
CX7 ER1031	07-10			CR 5076	
Mazda6 GG1, GH1	06-10			CR 5065	
Mazda2 DE	07-10			CR 5094	
Mazda3 BK, BL	04-10			CR 5094	
Tribute	01-10			CR 5014	
MPV	96-98			CR 5090	

Vehicle is not listed? please contact us.

Ph: 1800 air bag (1800 247 224)

info@airbagman.com.au

See AIR CONTROLS listings to add On-Board convenience.

Vehicle is not listed? please contact us.

Ph: 1800 air bag (1800 247 224)

info@airbagman.com.au

Tyre to Chassis Clearance Requirements: * = 190mm (7.5") +++ = 150mm (6") *** = 245mm (9.5")

Notes: + = Torsion Bars may require adjustment

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE



= No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Mazda Commercials					
B Series / Bravo (4x2 excl. 4.0L V6)	89-06			RR 4598	
B Series / Bravo (4x4 with Diesel or 4cyl Petrol)	89-06			RR 4567	
B4000 Bravo (4x2 & 4x4 with 4.0L V6)	05-07			RR 4585	
BT-50 4x2 with 2.5L TD	06-10			RR 4607	
BT-50 4x2 HighRider & 4x4 with 3.0L TD	06-10			RR 4596	
Mercedes Benz Cars/SUVs					
W164 (ML) With Rear Coil Springs	06-10			CR 5085	
Mercedes Benz Commercials					
Vito Van WDF638	96-04			OA 6001	
Vito Van WDF639	05-10			OA 6009	
Sprinter Van 200 and 300 Series WDB/F 901/902/903	96-06			RR 4559	
Sprinter Van 400 Series WDB904	96-06			RR 4571	4 bag
Sprinter Cab/Chassis 400 Series WDB904	96-06			RR 4572	4 bag
Sprinter Van & Cab/Chassis 300 Series	06-10	Flat Top Shock Bracket		RR 4602	
Sprinter Van & Cab/Chassis 300 Series	06-10	Angled Top Shock Bracket		RR 4603	
Sprinter Van & Cab/Chassis 515/518	06-10			RR 4595	HD Kit
Sprinter Cab/Chassis 616	06-10			RR 4613	4 bag
Mitsubishi Cars/SUVs					
Pajero NA-NJ	83-94			RR 4598	
Pajero NH-NL	90-99			CR 5031	
Pajero NM, NP, NS & NT (see NT notes)	00-10			CR 5002	
Pajero NM, NP, NS & NT + 2" lift	00-10			CR 5073	
Challenger KH	09-10			CR 5031	
Challenger PA	98-07			CR 5007	
Outlander	05-10			CR 5072	
L400 Delica 4x4 (Space Gear)	94-06			CR 5057	
L400 Delica 4x4 (Space Gear) 40mm Lift	94-06			CR 5034	
Magna Wagon TR/TS, TE-TL	92-05			CR 5053	

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

See AIR CONTROLS listings to add On-Board convenience.

If you are not sure about the D-40 version please see technical release LS02 23-06-2009

Vehicle is not listed? please contact us.

Ph: 1800 air bag (1800 247 224)

info@airbagman.com.au

NT Pajero rear springs are a new design; the CR kit can support a maximum load on the towball of about 100Kg and/or 80% of GVM, or will not level using a CR kit alone.

Tyre to Chassis Clearance Requirements: * = 190mm (7.5") +++ = 150mm (6") *** = 245mm (9.5")



















Notes: + = Torsion Bars may require adjustment

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Mitsubishi Commercials					
Triton ML/MN (4x2, 4x4) Leaf Over Axle	06-10			RR 4593	
Triton (4x2 excl. V6)	69-07			RR 4598	
Triton MK (4x2 V6 & 4x4 only) Leaf Under Axle	96-05			RR 4524	
Triton ME, MF, MG, MH, MJ (4x4 only) Leaf Under Axle	86-96			RR 4524	
Nissan Cars/SUVs					
Maxima J31, L32	04-10			CR 5090	
Murano	03-10			CR 5058	
X-Trail and Dualis	08-10			CR 5070	
Pathfinder WD21	86-95			CR 5022	
Pathfinder R50	95-05			CR 5003	
Pathfinder R51	05-10			CR 5046	
Pathfinder R51 Raised Suspension	05-10			CR 5077	
Patrol GU (Y61)	98-10			CR 5040	
Patrol GU (Y61) + 50mm (2") Raise	98-10			CR 5042	
Patrol GU (Y61) Full Air 1-2" RAISE (not utes)	98-10	OA 4513		OA 4512	
Patrol GQ (Y60)	88-97			CR 5040	
Patrol GQ (Y60) + 50mm (2") Raise	88-97			CR 5042	
Patrol GQ (Y60) - Full Air 1-2" RAISE (not utes)	88-97	OA 4513		OA 4512	
Patrol MQ (G160) Leaf Rear	80-87			RR 4581	
Terrano II (Import) R20	92-01			CR 5022	

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

See AIR CONTROLS listings to add On-Board convenience.

If you are not sure about the D-40 version please see technical release LS02 23-06-2009

Vehicle is not listed? please contact us.

Ph: 1800 air bag (1800 247 224)

info@airbagman.com.au

Tyre to Chassis Clearance Requirements: * = 190mm (7.5") +++ = 150mm (6") *** = 245mm (9.5")


























Notes: + = Torsion Bars may require adjustment

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Nissan Commercials					
Navara D21, D22 (4x2 Only)	86-10			RR 4577	 +
Navara D21, D22 (4x4 Only)(minor mods needed '09-)	86-10			RR 4575	
Navara D40 (4x2) Dual Cab RX Leaf Under Axle Only	10-			RR TBA	
Navara D40 (4x4, 4x2) Dual Cab ST-X Only	06-10			RR 4584	
Navara D40 (4x4) Dual Cab RX Spain	06-09	Up to Mid 2009		RR 4584	
Navara D40 (4x4) Dual Cab RX, ST & ST-R Thailand	09-10	From Mid 2009		RR 4616	
Navara D40 (4x4) Single and King Cab	08-10			RR 4616	
Patrol GU (Y61) Leaf Rear	98-10	OA 4513		RR 4516	
Patrol GU/GQ Coil Rear (light loads only)	88-10			CR 5040	
Patrol GU/GQ Coil Rear - Full Air 1-2" RAISE	98-10	OA 4513		OA 4523	
Patrol GQ (Y60) Leaf Rear	88-97			RR 4537	
Patrol MQ/MK (G160) Leaf Rear	80-88			RR 4581	
Renault Cars/SUVs					
Koleos	08-10			CR 5070	
Renault Commercials					
Master X70	98-10	CR5003		RR 4606	
Trafic X83	05-10			CR 5067	
Ssangyong SUVs					
Rexton Y200	02-06			CR 5032	
Rexton Y220	04-06			CR 5032	
Rexton II Y220 (Not SPR version)	07-10			CR 5032	
Actyon Sports (Ute)	06-10			CR 5032	
Kyron	06-10			CR 5061	
Musso Sports	04-06			CR 5022	
Musso Wagon	92-06			CR 5021	
Tata Commercials					
Telcoline	02-08			RR 4607	

Ride-Rite kit can be used with most popular lift kits

Please call Airbag Man about this vehicle

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

Ride-Rite kit can be used with most popular lift kits

SPR has independent rear suspension, as opposed to live axle on standard models

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE



= No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Toyota Cars/SUVs					
Landcruiser 200 Series (all versions)	07-10			CR 5080	
Landcruiser 200 Series + 20mm Raise	07-10			CR 5082	
Landcruiser 200 Series (all versions, std + raised)	07-10			OA	
Landcruiser 100 Series (w/out AHC)	98-07	CR 5006	No IFS	CR 5050	
Landcruiser 100 Series + 50mm (2") Raise	98-07			CR 5052	
Landcruiser 100 Series (w/out AHC)	98-07	CR 5006	No IFS	CR 5050	
Landcruiser 100 + 105 Series (OA4525 Excl. IFS)	98-07	OA 4525		OA 6003	
# IF REAR HELPER SPRINGS PREVIOUSLY FITTED, ADD 1 x				OA 6004	Weld
100 Series IFS std (lowers rear to match front)	98-07	1-2" Lower than std.		OA 6005	
100 Series Sahara late '05 on fitted with AHC, add cab control kit, call Airbag Man.					
Landcruiser 80 Series	8/91-98	CR 5006		CR 5049	
Landcruiser 80 Series + 25mm (1") Raise	8/91-98	CALL		CR 5050	
Landcruiser 80 Series + 50mm (2") Raise	8/91-98	CALL		CR 5051	
Landcruiser 80 Series - Full Air Conversion (Raises 91/8-95)	90-98	OA 4525		OA 6003	Full Air
Landcruiser 80 Series	90-7/91	CR 5006		CR 5050	
Landcruiser 80 Series + 25mm (1") Raise	90-7/91	CALL		CR 5051	
Landcruiser 80 Series + 50mm (2") Raise	90-7/91	CALL		CR 5052	
L'Cruiser 80 OA6003 & REAR HELPER SPRINGS PREVIOUSLY FITTED, ADD 1 x				OA 6004	Weld
Landcruiser 60 Series (w/o Factory d/lock)	81-90			RR 4522	
LC Prado 150 Series 3 Door (With rear coil springs)	09-10			CR 5096	
LC Prado 150 Series 5 Door (With rear coil springs)	09-10			CR 5013	
LC Prado 150 Series 5 Door 2" lift (With rear coil springs)	09-10			CR 5034	
LC Prado 120 Series (With rear coil springs)	03-09			CR 5035	
LC Prado 120 Series 2" lift (With rear coil springs)	03-09			CR 5034	
LC Prado 120 Series 2" lift (With rear coil springs)	03-09			OA 6010	
LC Prado 120 Series Grande 2" lift (Replaces OE airbags)	03-09			OA 6011	
LC Prado 90 & 95 Series	96-02			CR 5004	

See AIR CONTROLS listings to add On-Board convenience.

Vehicle is not listed? please contact us.
Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

Note 1990-07/1991 models are 20mm higher than later 80 Series






















OA kits are also available for all versions of Prado 120 with 1" raise or standard height.

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Toyota Cars/SUVs continued					
4-Runner (HiLux Surf)	02-10			CR 5035	
4-Runner (HiLux Surf) VZN/RZN 180/185	96-02			CR 5037	
4-Runner (HiLux Surf) LN, YN, VZN130	88-97			CR 5038	
4-Runner (Surf) LN61, YN63 Leaf Rear	84-97			RR 4531	
Rav4 ACA33R	06-10			CR 5066	
Rav4 SXA10/11/116, ACA 20R/21R/23R	96-05			CR 5055	
Tarago	06-			CR 5060	
Tarago ACA30R	00-05			CR 5059	
Tarago TCR10, TCR 20 non IRS	90-00			CR 5088	
Yaris NCP90	05-10			CR 5053	
Echo JW33, NCP1	01-05			CR 5025	
Toyota Commercials					
Landcruiser Ute with 4" lift (75 series on)	85-10			RR 4627	
Landcruiser LC70	07-10	CR 5005		RR 4500	
L'cruiser LC70 GX, GXL, Troopy	07-10	CR 5005		RR 4503	
L'cruiser LC70 Raised	07-10	CR 5005		RR 4502	
L'cruiser LC70 GX, GXL, Troopy Raised	07-10	CR 5005		RR 4504	
Landcruiser 78, 79 Series	99-06			RR 4500	
L'cruiser 78, 79 Series RV, Troopy	99-06			RR 4503	
L'cruiser 75, 78, 79 Series Raised	85-06			RR 4502	
L'cruiser 78, 79 RV, Troopy Raised	85-06			RR 4504	
Landcruiser 76 Series Wagon	07-10	CR 5005		RR 4500	
Landcruiser 75 Series MK2	91-99	RR 4501		RR 4500	
L'cruiser 75 Series MK1, 70, 73 Series	85-90			RR 4500	
Landcruiser 40-55 Series	59-84			CALL	Req. Fab

See AIR CONTROLS listings to add On-Board convenience.
 Vehicle is not listed? please contact us.
 Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

Has special requirements, call for more info.















See AIR CONTROLS listings to add On-Board convenience.
 Vehicle is not listed? please contact us.
 Ph: 1800 air bag (1800 247 224)
info@airbagman.com.au

AIRBAG MAN LIGHT VEHICLE APPLICATION GUIDE

 = No-Drill Airbag Mounts

CURRENT 1st JUNE 2010

Kit Codes: **RR = Ride-Rite™** **CR = Coil-Rite™** **OA = On-Air™** **LU = Load-Up HD bumper kit**

	Year	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Toyota Commercials continued					
HiLux (4x2 Only) GGN15, TGN/KUN16	03/05-10			RR 4600	 +
HiLux (4x2 Only) (Straight axle)	84-04			RR 4531	 +
HiLux (4x2 Only) (Stepped axle)	84-04			RR 4574	 +
HiLux (4x4 Only) GGN25/KUN26 Excludes TRD	03/05-10			RR 4576	
HiLux (4x4 Only) Standard Height to 25mm Lowered	03/05-09			RR 4622	
HiLux TRD	08-09			RR 4622	
HiLux (4x4 Only)	84-04			RR 4560	 +
HiAce Van KDH/TRH200	05-10			RR 4619	
HiAce SB Van	97-			CR 5089	
Volkswagen Cars/SUV's					
Jetta, Passat Wagon	07-10			CR 5083	
Eos, Golf, CC	07-10			CR 5084	
Tiguan	09-10			CR 5084	
Volkswagen Commercials					
T-4, Transporter, Caravelle, Euro Van	85-04			CR 5039	
T-4, Transporter, Caravelle, Euro Van	96-04			OA 6022	Full Air
T-5 Van (4x2, 4x4)	04-10			OA 6006	Full Air
T-5 Cab-chassis (4x2, 4x4)	04-10			OA 6007	Full Air
Caddy	05-10			RR 4610	
Crafter range - See Mercedes Benz Sprinter 07 (Crafter 35 = 300 Series, Crafter 50 = 500 Series)					
LT range see Mercedes Benz (LT35 = 300 series, LT 46 = 400 series)					
Winnebago Motorhomes					
See relevant Chassis manufacturer above or in truck listings, if unsure about the chassis please contact Airbag Man					

Ride-Rite kit can be used with most popular lift kits

DO NOT EXCEED THE VEHICLE'S LEGAL GROSS VEHICLE MASS RATING (GVM) OR AXLE CAPACITIES

Notice: Some vehicles may require certification for legal fitment of Airbag Man air spring products, please check with regulatory authorities regarding this before purchase or fitment of Airbag Man air spring kits.

Notice: Airbag Man and Firestone have made every attempt to assure that the air helper spring kits listed will properly fit. Chassis modifications made by others that effect suspension dimensions may not provide conditions for proper fit. Due to new model introductions and manufacturer changes, Airbag Man reserves the right to make changes to the list without notification.

Notice: Some manufacturers use brake proportioning valves to adjust braking force as a function of chassis to axle distance. If you modify your suspension it effects the function of this valve. We suggest that you check with your dealer on proper treatment of this device prior to installation of air spring kits.

Tyre to Chassis Clearance Requirements: * = 190mm (7.5") +++ = 150mm (6") *** = 245mm (9.5")

Notes: + = Torsion Bars may require adjustment

AIRBAG MAN TRUCK APPLICATION GUIDE

CURRENT 14th May 2010



	YEAR	FRONT KIT	Front Notes	REAR KIT	Rear Notes
Chev/GMC					
Koidak 4500/5500	02-10		Winnebago has Ride-Rite factory fitted	RR4624	Twin kit for Winnebago's
Ford / Sterling					
Trader				RR4534	Fabricator Kit
L 8000	1992+	LS2079			
L 9000	1992+	LS2079			
Louisville	1997+	LS2079			
LT 8513	1997+	LS2079			
AT 9513	1999+	LS2079			
AT 9522	1999+	LS2079			
L 7501	1999+	LS2079			
LT, LNT, LTA		LS2079	?		
LTL, LTLA, LTLS9, LTS9		LS2079	?		
LTL 9000		LS2079	Should fit easily		
Freightliner					
C 112	1999+	LS2079	Needs offset lower		
CST 120		LS2079	Has been Fitted OK		
F 112	1999+	LS2079	Needs offset lower		
FL 80	1999+	LS2079	Needs offset lower		
FLD 120	1999+	LS2079	Needs offset lower		
Century	1999+	LS2079	Needs offset lower		
Hino					
300 Series 916	07-	RR4617		RR4618	Requires Drilling
Ranger Pro 9 & 10		LS2041	Need to remove or cut splash guard		
300 Series (not 414)	07-	LS2042	Need to remove or cut splash guard		
Rainbow		CALL	Factory Helpers	CALL	Factory Helpers
Dutro		LS2041	May need to remove or cut s	RR4534	Fabricator Kit
379		LS2078	Single Bag		

IMPORTANT:

ALL OF THE KITS LISTED REQUIRE SOME FABRICATION DURING FITTING THIS WILL INCLUDE DRILLING, AND MAY INCLUDE GRINDING, CUTTING AND WELDING OF THE BRACKETS AND VEHICLE.

International / Iveco					
Acco Single Steer Models	all	LS2079	Shock may need moving		
Acco Twin Steer Models	all		Use AB0141, make brackets		
1718		LS2079	Easy Fit		
9200i		LS2079	Shock may need moving		
9900i		LS2079	Shock may need moving		
Isuzu					
NPR 200 to 400	pre '02	RR4509	Req. Stepped Chassis	RR4536	Fabricator Kit
NPR 200 to 400	02-07	RR4535	Straight Chassis	RR4536	Fabricator Kit
NPS 230 & 300 4x4	02-07	RR4533	Minor Fabrication only	RR4534	Fabricator Kit
NQR450	02-07	RR4535	Minor Fabrication only	RR4536	Fabricator Kit
NPS 250 & 300 4x4	08-10	RR4538	Minor Fabrication only	RR4539	Fabricator Kit
NPR and NQR	08-10	RR4611	Minor Fabrication only	RR4612	Fabricator Kit, requires longer u-bolts with standard leaf springs, may require exhaust modification
Kenworth					
C 500 / C 550		LS2079			
K 100, K 125		LS2079	Excl. Detroit engines		
T 450 to T900		LS2079	Rounded U-Bolts		
W 900 L		LS2079	Rounded U-Bolts		
W 900 B		LS2079	One side top offset		
Mack					
R Superliner		LS2079	Check height & offset		
MH cab over		LS2079			
CRH		LS2079	Check u-bolts		
CLR		LS2079	Check u-bolts		
Mitsubishi					
Canter FG 4x4	98-09	RR4528		RR4534	Fabricator Kit
Canter 4x4				RR4569	Fabricator Kit
Canter 4x2		LS2041	Fabricator Kit	RR4536	F/ Kit, Shock needs moving
Peterbilt					
All known models		LS2079			
Volvo					
VHD	00-02	LS2079	Top brackets req. mods		
VHD 64B	03-	T.B.D.			
Western Star					
3800, 4800, 4900		LS2079	Shock may need re-location		
5900, 6900		LS2079	Shock may need re-location		
7500		LS2079	Shock may need re-location		

IMPORTANT:
ALL OF THE KITS LISTED REQUIRE SOME FABRICATION DURING FITTING THIS WILL INCLUDE DRILLING, AND MAY INCLUDE GRINDING, CUTTING AND WELDING OF THE BRACKETS AND VEHICLE.



AIR SPRINGS & AIR SUSPENSION SPECIALISTS



AIRBAG MAN AIR CONTROL GUIDE

CURRENT 1st JUNE 2010

MOST POPULAR KITS SHOWN IN BOLD

Part	TYPE	DESCRIPTION				
Control + Compressor Kits						
AC1150	Complete Control	Single, standard duty compressor, direct inflation, remote controlled				
AC1160	Complete Control	Single, standard duty compressor, direct inflation, height sensor controlled				
AC1200	Complete Control	Dual cab controller, standard duty compressor, direct inflation				
AC1251	Complete Control	1253 Style, add to compressor w/ out pressure switch, incl. 2 gallon tank				
AC1252	Complete Control	1253 Style, for compressors with own pressure switch (ARB Style), incl. 2 gallon tank				
AC1253	Complete Control	Dual cab controller, heavy duty compressor, 3 gallon air tank, tyre inflation wand				
AC1254	Complete Control	Dual cab controller, heavy duty compressor, 2 gallon air tank, tyre inflation wand				
AC1255	Complete Control	Dual cab controller, heavy duty compressor, 1 gallon air tank, tyre inflation wand				
AC1350	Complete Control	Intelliride 3 height, 4 corner, electronic height control				
Control Kits						
AC3100	Air Monitor	Single Black gauge, provides pressure monitoring in cab - Use with separate air control				
AC3102	Air Adjust	Single Manual, paddle switch, single needle white gauge - Use with any comp. kit				
AC3110	Air Adjust	Single Automatic, slow flow height control valves, linkages - Use with HD comp. kit				
AC3200	Air Monitor	Dual white gauge, provides pressure monitoring in cab - Use with separate air control				
AC3202	Air Adjust	Dual Manual, two paddle switches, dual needle white gauge - Use with any comp. kit				
AC3210	Air Adjust	Dual Automatic, slow flow height control valves, linkages - Use with HD Compressor kit				
AC3400	Air Adjust	Quad Manual, 4 paddle switches, 2 dual needle white gauge - Use with any comp. kit				
	Solenoids	2, 3, 4 Corner Solenoid systems and Cross link systems available				
Compressor Kits						
AC4024	Air Supply Kit	24Volt Thomas high pressure air compressor (AC8104) kit, 3 g tank, truck air supply				
AC4100	Air Supply Kit	Thomas high pressure air compressor (AC8107) kit, 3 g tank, tyre inflation hose, inflation wand incl. gauge				
AC4150	Air Supply Kit	Viair 400C air compressor (AC8304) kit, 3 g tank, tyre inflation hose, inflation wand incl. gauge				
Air Compressors - 12v and 24v						
Part Number	Max. Air Pressure	Description	Duty Cycle	Amp. Draw	CFM @ 60 psi	CFM @ 100 psi
AC8001	130 psi (9.0 bar)	Viair 100C (Up to 1 gallon air tank)	15%	14 Amps	0.67	0.57
AC8107	130 psi (10.0 bar)	Firestone/Thomas high flow (Up to 3 gallon air tank)	35%	17 Amps	0.92	0.74



AC1200



AC1253



AC3202



AC4100



AC8107

Air Compressors - 12v and 24v - continued

Part Number	Max. Air Pressure	Description	Duty Cycle	Amp. Draw	CFM @ 60 psi	CFM @ 100 psi
AC8303	150 psi (10.0 bar)	Viair 450C high duty (up to 5 gallon air tank)	100%	19 Amps	1.18	0.94
AC8303-24	150 psi (10.0 bar)	Viair 450C 24v IG high duty (up to 5 gallon air tank)	100%	11 Amps	1.20	0.97
AC8304	150 psi (10.0 bar)	Viair 400C high flow (up to 5 gallon air tank)	33%	26 Amps	1.62	1.27
AC8305	150 psi (10.0 bar)	DUAL Viair 400C high flow (up to 2 x 5 gallon air tanks)	33%	51 Amps	3.07	2.47

Control Parts

AC7100	Gauge	Single needle gauge, white face
AC7102	Levelling Valve	Replacement levelling valve for AC3110 and AC3210
AC7200	Gauge	Dual needle gauge, white face
AC7401	Inflation Coil	Inflation wand assembly, 7.6m (25 foot), from AC4100, AC4150 / AC1253 kit
FAC7103	Control Switch	Air control paddle switch, to suit 1/4" tubing
FAC7403	Pressure Switch	Pressure switch, 90 psi cut in, 120-130 psi cut out
FAC7405	Pressure Switch	Pressure switch, 110 psi cut in, 145 psi cut out
FAC7404	Pressure Switch	Pressure switch, 100 psi cut in, 150 psi cut out
FAC7406	Pressure Switch	Pressure switch, adjustable to suit Pmax of 50 to 175 psi

Air Tanks - Tested and Certified to SAE J10

Part Number	Capacity in Gallons	Number and Size of Ports	Mount Centres	Length	Dia.	Drain
AC9014	1/4 Gallon	Two 1/4 NPT Ports	-	6"	4"	NO
AC9012	1/2 Gallon	Two 1/4 NPT Ports	-	7.63"	6"	NO
AC9010	1 Gallon	Two 1/4 NPT Ports	-	12"	6"	NO
AC9020	2 Gallon	Two 1/4 NPT Ports	7.25"	14.5"	6"	NO
AC9031	3 Gallon	Three 1/4 NPT Ports	12"	20.75"	7"	YES
AC9050	5 Gallon	Two 1/4 NPT Ports	14"	20.75"	9.5"	NO
AC9051	5 Gallon	2 end + 4 side 1/2 ports, 1x 1/4 NPT port	21.75"	34"	7"	YES
AC9052	5 Gallon	5 end 1/8 & 1/4 ports + 4 side 1/2 ports	14"	20.75"	9.5"	NO
AC9120	20 Gallon	2 end + 4 side 1/2 ports, 1x 1/4 NPT port	30.75"	44"	12"	YES

Note for Dealers: Some components are not subject to normal pricing structures.



AC8304



AC3210 (AC7102 VALVE)





AIRBAG MAN AIR SPRING GUIDE

CURRENT 1st JUNE 2010

PART NUMBER	TYPE	Port Size	Min Height	Ride Height	Max. Height	Max. Dia. @100psi	Max. Load @100psi
Air Springs		Heights all in millimeters, Divide by 25.4 for inches					
AB 0014	OA4525 Air Spring Assy.	1/4 BSP	150	255	420	169	1050 Kg
AB 0022	R4.5 1/8 Firestone Assy.	1/8 NPT	61	102-114	178	114 @80	370 Kg
AB 0024	R4 1/8 Firestone Assy.	1/8 NPT	146	178-229	305	102 @80	368 Kg
AB 0025	R5 1/8 Firestone Assy.	1/8 NPT	127	184-222	330	127	455 Kg
AB 0027	R3.1 1/8 Firestone Assy.	1/8 NPT	92	127-146	229	79 @80	170 Kg
AB 0030	R5.4L 1/4 Firestone Assy.	1/4 NPT	169	184-222	260	145	520 Kg
AB 0031	R5.4S 1/4 Firestone Assy.	1/4 NPT	111	149-171	216	145	520 Kg
AB 0032	R5.4M 1/4 Firestone Assy.	1/4 NPT	134	171-191	235	145	520 Kg
AB 0040	R6.5 1/8 Air Spring Assy.	1/8 NPT	150	225-250	350	165	760 Kg
AB 0050	R9S 1/4 Firestone Assy.	1/4 NPT	137	241	349	231	1470 Kg
AB 0051	R9M 1/4 Firestone Assy.	1/4 NPT	163	267	400	231	1470 Kg
AB 0053	R9L 1/4 Firestone Assy.	1/4 NPT	178	353	546	228	1470 Kg
AB 0054	R5 1/4 Firestone Assy.	1/4 NPT	153	267	381	127	350 Kg
AB 0055	R6.8 1/4 Firestone Assy.	1/4 NPT	160	330	457	173	720 Kg

TECH TIPS
<p>Use heat shields for air springs less than 3" from exhaust systems.</p>
<p>Maintain a minimum of 13mm (1/2") of clearance around the air spring while inflated.</p>
<p>Ride Height is defined as the drive position of the vehicle.</p>
<p>Larger port sizes are offered for faster response time.</p>
<p>Maximum operating pressure is 100 PSI</p>



**AIR SPRINGS
& AIR SUSPENSION SPECIALISTS**



AB 0100	S7.20 1/8 Firestone Assy.	1/4 NPT	76	127	165	183	800 Kg
AB 0101	S7.2 1/4 Firestone Assy.	1/4 NPT	76	127	165	183	800 Kg
AB 0102	S9.2 1/4 Firestone Assy.	1/4 NPT	54	127	191	224	1070 Kg
AB 0103	S10.1 1/4 Firestone Assy.	1/4 NPT	76	102	152	255	1370 Kg
AB 0110	D6.4 1/4 Firestone Assy.	1/4 NPT	71	114	178	263	625 Kg
AB 0113	D6.4 1/4 Firestone Assy.	1/4 NPT	71	114	178	263	625 Kg
AB 0120	D6.6 1/8 Firestone Assy.	1/4 NPT	71	140	211	168	752 Kg
AB 0121	D6.6 1/4 Firestone Assy.	1/4 NPT	71	140	211	168	752 Kg
AB 0124	D6.6 3/4 Firestone Assy.	3/4 NPT	71	140	211	168	752 Kg
AB 0125	D6.6 1/4 Firestone Assy.	1/4 NPT	71	140	211	168	752 Kg
AB 0130	D8 1/4 Firestone Assy.	1/4 NPT	71	152	222	203	970 Kg
AB 0131	D8 1/4 Firestone Assy.	1/8 NPT	71	152	222	203	970 Kg
AB 0135	D8 1/4 Firestone Assy.	1/4 NPT	71	152	222	203	970 Kg
AB 0141	D8.6 1/4 Firestone Assy.	1/4 NPT	76	178	254	219	1135 Kg
AB 0150	D9.9 1/4 Firestone Assy.	1/4 NPT	107	178	280	252	1500 Kg



Air Inlet Hole Size Guide (Internal Measurement)
1/8 NPT = 0.33" = 8.5mm
1/4 NPT = 0.46" = 11.5mm
3/8 NPT = 0.58" = 15mm
1/2 NPT = 0.72" = 18mm
3/4 NPT = 0.92" = 23mm

AIR PRESSURE REQUIREMENTS

Please note that air pressure will vary depending upon several factors such as load, road conditions, temperature and personal preference. Feel free to experiment with different air pressures to find the best ride for you and your vehicle. It is important thought to keep the air spring height within the ride height values as shown in the chart above. Air pressure in Coil-Rite kits are dependant upon vehicle application. Please consult the installation manual and bulletins for specifics.

TECH TIPS

Note: Never operate the vehicle without minimum air pressure in the air springs

Failure to maintain proper air pressure will void all warranties.

Note: When raising the vehicle by the chassis, release air pressure from the system.

This allows the air spring to fully extend.